



# SWISSTRAX® MODULAR FLOORING INSTALL INSTRUCTIONS

For quality assurance, please read entirety before you begin.

## Step 1: (Optional) PREPARATION


- Clear the flooring surface of any removable objects and or items. Sweep or vacuum any excess dirt and debris off of the flooring surface.

*\*WARNING: Do not walk on tiles that are not interlocked as they can be a slipping hazard. When installing your floor, be cautious of Swisstrax tiles placed on top of one another.*

## Step 2: INSTALL TILE #1


- Facing your garage door opening, place Tile #1 in the top left corner with the pegged “male” sides facing the left and top.

*\*NOTE: A minimum expansion gap of ¼” for perforated tiles (Ribtrax, Ribtrax Smooth, Sportrax) and ½” for all other styles (Diamondtrax, Floortrax, Vinyltrax) should be left at the walls and/or any other immovable objects such as cabinets, vehicle lifts, support beams, etc.*

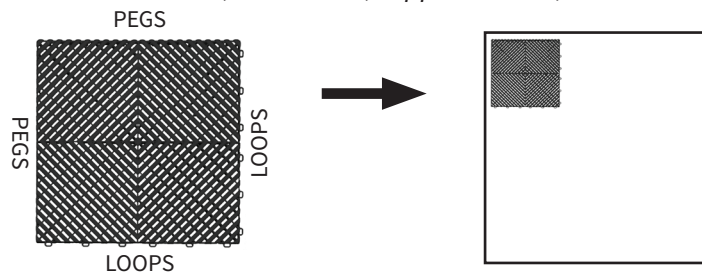

## Step 3: INSTALL NEXT TILES

- Work left to right, interlock Tile #2 into Tile #1 making sure that loops and pegs are facing the same direction.

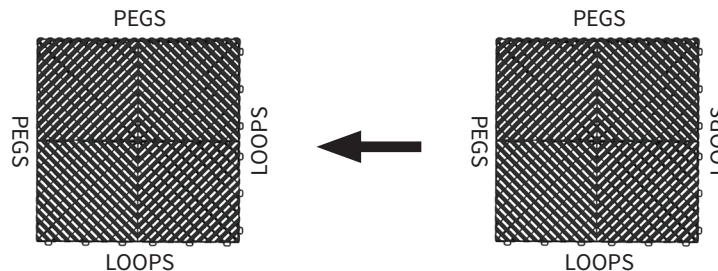


## Step 4: COMPLETE ROW #1

- Continue interlocking tiles until the desired width of first row is complete.

## Step 5: CONTINUE TO ROW #3

- Begin your second row and continue interlocking tiles until the end of the third row has been reached.

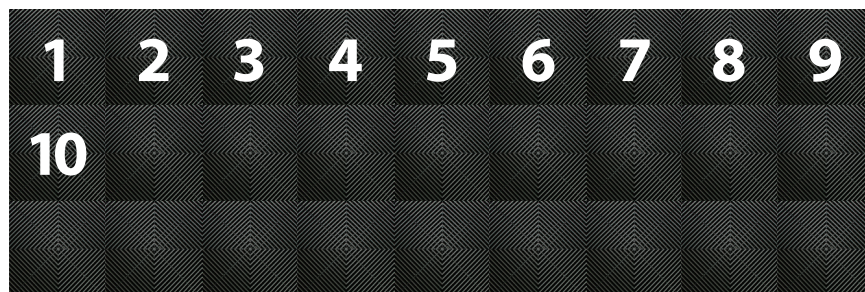



# SWISSTRAX® MODULAR FLOORING INSTALL INSTRUCTIONS


For quality assurance, please read entirety before you begin.

## Step 6: ATTACH EDGES

- Complete the first three rows, then connect edges to the first installed row nearest to the garage door entry.  
*\*Note: Edges are only needed between the garage door rails.*


### LOOPED Edge Into Tile

- Lift up tile and align the looped edge with the pegs of the tile and snap into place.

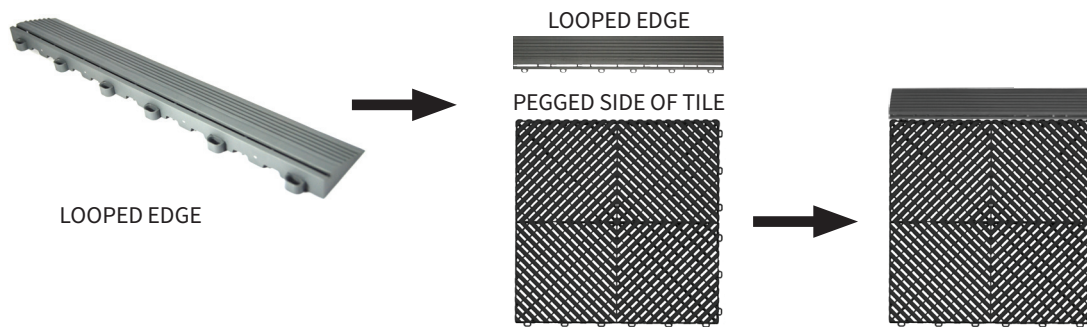

### PEGGED Edge Into Tile

- Align the pegged edge over the looped side of the tile and snap into place.

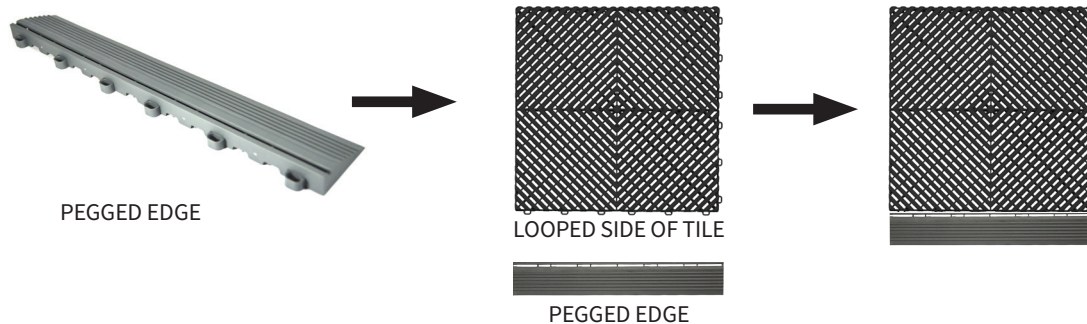

## Step 7: POSITION EDGES

- Position the first 3 rows of interlocked tiles and edges against the closed garage door for a precise fit.  
*\*Note: If you have an elevated garage lip, please allow 2" of space between lip and edges. This will ensure even pressure and a secure floor every time you enter or exit your garage.*

## Step 8: INTERLOCK REMAINING TILES

- Continue on with row #4 until desired length is reached.  
*\*Note: Cutting may be necessary along the back wall to complete install!*

## Step 9: (Optional) CUSTOM CUTS

- All Swisstrax® products can be cut with an electrical saw such as a circular saw, jig saw, table saw, etc. A fine toothed blade with more than 80 teeth is recommended.  
*\*NOTE: When cutting tiles, position tiles accordingly to ensure they interlock with the rest of your installed flooring. Refer to the tool manufacturer's safety guidelines.*




## SWISSTRAX® MODULAR FLOORING INSTALL INSTRUCTIONS

For quality assurance, please read entirety before you begin.

### INSTALLING GRAPHICTRAX®


- When adhering *Graphictrax*®, install empty *Graphictrax*® tiles as desired without vinyl graphic in *Swisstrax*® Flooring.
- Peel off backing from graphic and carefully insert it into the *Graphictrax* tray.

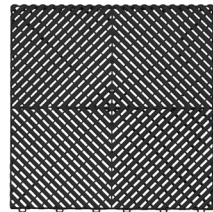

*Graphictrax*® Tray



*Ford*® Graphic

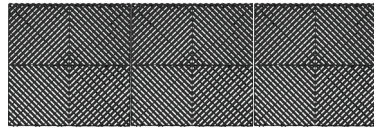

*Graphictrax*® Tray



*DODGE*® Graphic